




303 MESSNER DR. • WHEELING, IL • 60090
847-459-1460 • FAX 847-459-1569
WWW.LUND-INDUSTRIES.COM

CVCMT Crown Victoria Seat Post Mounting Bracket

Adjust Console to the proper position. Position bracket to the pems on side of console, install 5/16 x 3/4" bolt and washer into pem and tighten.

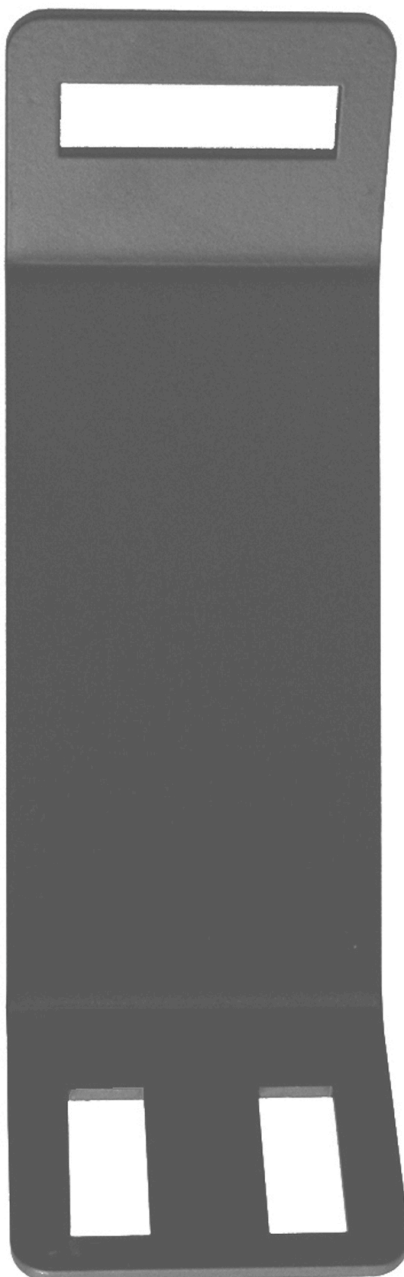

This end fits under the front seat leg. Remove seat bolt, install bracket, re-install bolt and tighten.