




303 MESSNER DR. • WHEELING, IL • 60090
 847-459-1460 • FAX 847-459-1569
 WWW.LUND-INDUSTRIES.COM

Installation Instructions For 1998-Newer Ford Taurus FP-611 Base


The FP-611 (1998-Newer Ford Taurus base) is a no-holes passenger side base. Installing a no-holes base does not require drilling any holes into the vehicle.

Installing the FP-611 Base in the vehicle:

1. Place both front seats of the vehicle in their most rearward position.
2. Remove the following fasteners that hold the seats down to the vehicle floor: Front right seat fastener on driver's side and front left seat fastener on passenger's side.
3. while lifting seat up slightly, slide the FP-611 base in between the vehicle floor and the seat. The platform portion of the base should be positioned toward the front of the vehicle.
4. Line up the holes, (some bases have slots which allow front-to-back or side-to-side adjustment) re-install the seat fasteners and tighten, securing both the seats and the FP-611 Base to the floor.

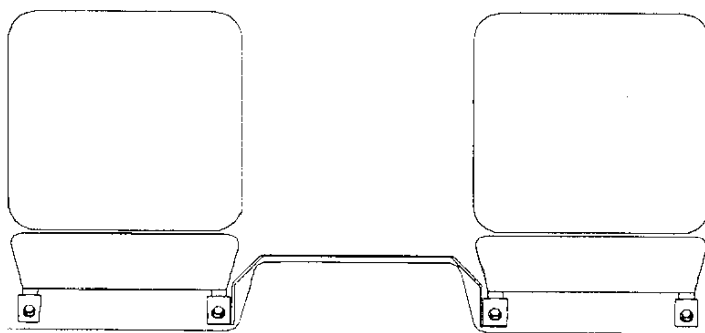

Inner seat mounting bolts

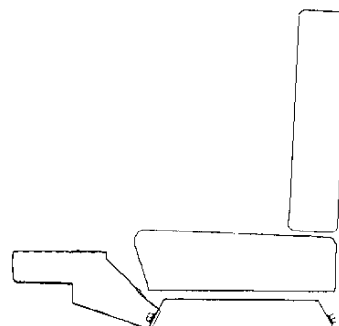

Inner seat mounting bolts