



303 MESSNER DR. • WHEELING, IL. • 60090
847-459-1460 • FAX 847-459-1569
WWW.LUND-INDUSTRIES.COM

CAP-BASE

Remove factory plastic shroud


Remove rear bolts from factory console

Loosely attach supplied front brackets to factory bolts

Place Lund base plate over front brackets and loosely fasten base plate to brackets with supplied 3/8" hardware

Add supplied plastic spacer to rear of base plate and fasten w/ supplied m6 x 1.0 bolt

Square up console and base plate and tighten all hardware securely

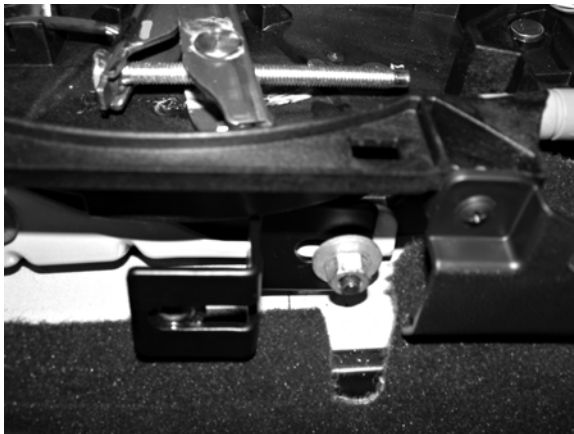

FRONT



REAR